

System 2X-Star SP298 Weighbridge Slip Printer

Ian Fellows
LIMITED

STAR SP298 Printer with SYSTEM 2X Indicator - GENERAL WEIGHBRIDGE USE -



Connection –

Install printer cable on System 2X – use screened cable with 25 Way Male D connector. Terminate screen at System 2X gland/case entry but do not connect at printer.

System 2X (COM1)	Printer (25 Way D Connector)
TX (transmit)	Pin 3
RX (busy)	Pin 20
GND (ground)	Pin 7

SP298 Printer Configuration –

The printer will normally be used with factory default settings – DIP switches 1-7 ON; 8-10 OFF. See User Manual for operating instructions.

System 2X Configuration –

Set the System 2X for weighbridge use (see Operation Manual for full details) –

- Select weighbridge mode – `engcfg bridge 1`
- Select SP298/TM295 printer Type – `pr_cfg type 4`

Print Format is automatically set to the default shown below.

The layout and contents can be modified using the System 2X Formatting and Control features.

Default Weighbridge Print Format

```
02/11/98      10:46
Running no.    31
Store Ident   3
First Wt.     25400kg
```

```
02/11/98      10:46
Running no.    32
Re-Entered(IDENT)
Gross         25400kg
Tare          <10000kg>
Net           15400kg
```

```
02/11/98      11:03
Running no.    43
Store Ident   5
First Wt.     25400kg
```

```
02/11/98      11:03
Running no.    44
Re-Entered(IDENT)
Gross         25400kg
Tare          <10000kg>
Net           15400kg
```

Create this format by changing:

```
P_ctrl ctrl 1a 1b210200 (1B 21 02 00)
P_ctrl ctrl 2a 1b212000 (1B 21 20 00)
Pr_for hSpC1A 26E2000 (26E2000)
Pr_for hSpC2A 2604000 (2604000)
```

Formatting Tips

Useful pr_For Menu Items

- HDSTAT removes the printed titles (for use on tickets with pre-printed boxes)
- FOR1 A +FOR1 B set the items in '1st' print
- FOR2 A +FOR2 B set the items in '2nd' print*
- 1st Cr sets line feeds before 'first' print
- 2nd Cr sets line feeds before 'second' print
- SPC1 A/B & SPC2 A/B add spaces in front of each item
- HSPC1 A/B & HSPC2 A/B adjust packing spaces between title and data
- CR1 A/B & CR2 A/B adjust line feeds after each item

WEIGHBRIDGE TICKET		
GOODS		TICKET No. 08611
IN	OUT	
02/11/98 12:11 Running no. 49 Store Ident 6 First Wt. 10000kg		
02/11/98 12:12 Running no. 50 Re-Entered(IDENT) Gross <25400kg> Tare 10000kg Net 15400kg		
CUSTOMER / SUPPLIER	DESCRIPTION OF LOAD	HAULIER
VEHICLE REG'N. No.	DEL/RECEIPT NOTE No.	REMARKS
'SECURITICKET' BY POLLARDS, EXETER 01392 445333 Specialists in Single and Multiple Weighbridge Tickets		W/B OPERATOR'S SIGNATURE
		DRIVER'S SIGNATURE

*This example uses item type 4 to give special Gross/Tare/Net Printout. Types 1,2 & 3 could be used to give specific 1st, 2nd& Net weight items

Printer Control Characters

The P_Ctrl menu enables printer control characters to be included in the transmission to the printer. The table below demonstrates the construction of the print output.

Control Char's CtrlH A/B	Shaded Fields are Enabled \ Disabled by HdStAt					
Carriage Return (CR) , CR/LineFeed(LF) 1 st Cr or 2 nd Cr						
Control Char's Ctrl1 A/B	Leading Spaces SPC1A/B, SPC2A/B	Header Field defined by "type"	Packing Spaces HSPC1A/B HSPC2A/B	Control char's Ctrl2 A/B	Data Field defined by "type"	CR , CR/LF Cr1A/B Cr2A/B
⇒ ⇒ ⇒ ⇒ REPEATED FOR EACH ITEM IN PRINT FILE Pfor \ Qfor ⇒ ⇒ ⇒ ⇒						
Control Char's Ctrl1 A/B	Leading Spaces SPC1A/B, SPC2A/B	Header Field defined by "type"	Packing Spaces HSPC1A/B HSPC2A/B	Control char's Ctrl2 A/B	Data Field defined by "type"	CR , CR/LF Cr1A/B Cr2A/B
Control Char's CtrlF A/B						